



Automatic lubrication system

The automatic lubrication system is pre-set by us to **250 LC and 12 months**. All you need to do is press the SET button for 3 seconds. The number 12 will appear, and a dash will show next to 250 LC, while the side of the drive unit will flash green.



Replacing the refill

- Turn the lubrication system out of the holder, remove the protective cap, and unscrew the drive unit from the refill.
- Remove the old battery pack by pressing the arrow on the side and replace the battery pack. The drive unit will now power on and return to the last settings.
- Screw the new grease cartridge onto the drive unit, ensuring the white arrows on the drive unit are fully visible.
- Remove the black cap from the refill and place the lubrication system back into the holder.

Replace the grease cartridge and batteries annually. While doing so, check the hose of the lubrication system and clean the nipples.



Troubleshooting Drive Unit

Check the drive unit when it flashes red:

Lo = Low battery: Replace the battery pack.

Er = Drive unit malfunction: Replace the drive unit.

00 = Settings erased: Refer to **drive unit reset instructions** to reconfigure.

Is the display unresponsive even with new batteries? There might be some condensation inside the drive unit. Let the drive unit dry indoors for a few days and check if the issue is resolved.



Drive Unit Reset

If there is a malfunction, you can reset and reconfigure the drive unit:

1. Unscrew the drive unit from the grease cartridge.
2. Remove the battery by pressing the arrow on the side.
3. Wait for 3 minutes, then reinsert the battery.
4. Two dashes will appear: - -.
5. Hold the SET button until a dash starts flashing. You can now set the grease amount. We recommend **250 LC**.
6. Then, the letter "m" (monthly setting) will start flashing.



7. Now a number will start flashing: press 12 times to set 12 months.
8. **ru** will flash: **ru = running**. The drive unit is now configured.



9. Reattach the drive unit to the grease cartridge.
10. Check if the green light is flashing and that **12 months and 250 LC** are displayed.